# Process Meter K3MA-J

# Highly Visible LCD Display with 2-color (Red and Green) LEDs

- Multi-range DC voltage/current input.
- Front-panel key operation for easy setting.
- Average processing function suppresses flicker.
- Scaling, front-panel forced-zero, zero-limit functions.
- · Easy confirmation of max/min display.
- Short 80-mm depth (measured from edge of face plate).
- Finger protective cover (standard equipment) guards against electric shock.
- Water- and dust-proof NEMA TYPE 4X (IP66 equivalent) front panel.
- Recognized to U.S. and Canadian requirements under the Component Recognition Program of UL.

• CE marking.

Refer to Safety Precautions for All Digital Panel	
Refer to Safety Precautions for All Digital Panel Meters.	



For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

# **Model Number Structure**

# Model Number Legend

K3MA-<u>J</u>-

- 1. Input Type
- J: DC voltage/current
- 2. Comparative Output Model
- None: No output A2: 2 relay contact outputs (SPST-NO)

# **Ordering Information**

# ■ List of Models

Input type	Supply voltage	Comparative Output Model	Model
DC voltage/current	100 to 240 VAC	None *	K3MA-J 100-240VAC
		2 relay contact outputs (SPST-NO)	K3MA-J-A2 100-240VAC
24 VAC/VDC None *		None *	K3MA-J 24VAC/VDC
		2 relay contact outputs (SPST-NO)	K3MA-J-A2 24VAC/VDC

\* Changing the display color based on comparison with a reference value is not possible.

3. Supply Voltage 100-240VAC: 100 to 240 VAC 24VAC/VDC: 24 VAC/VDC

# ■ Accessories (Order Separately)

Name	Shape	Model
Splash-proof Soft Cover		K32-49SC
Hard Cover		K32-49HC
Watertight Cover		Y92A-49N
Rubber Packing		K32-P1

Note: Rubber packing is provided with the Controller.

# Specifications

# Ratings

Model	K3MA-J 100-240VAC, K3MA-J-	A2 100-240VAC	K3MA-J 24VAC/VDC, K3MA-J-A2 24VAC/VDC		
Supply voltage	100 to 240 VAC		24 VAC/VDC		
Operating voltage range	85% to 110% of the rated supply vo	oltage			
Power consumption (under maximum load)			4.5 VA max. (24 VAC) 4.5 W max. (24 VDC)		
Insulation resistance	$20 \text{ M}\Omega$ min. (at 500 VDC) between Insulation provided between inputs				
Dielectric strength	2,000 VAC for 1 min between exter Insulation provided between inputs				
Noise immunity	mon mode.		$\pm 480$ V on power supply terminals in normal mode. $\pm 1,500$ V in common mode. $\pm 1~\mu s,~or~100$ ns for square-wave noise with 1 ns.		
Vibration resistance	Vibration: 10 to 55 Hz, 0.35-mm ha 5 min each in X, Y, and Z directions				
Shock resistance	150 m/s <sup>2</sup> (100 m/s <sup>2</sup> for relay contact outputs) 3 times each on 3 axes, 6 directions.				
Ambient temperature	Operating: -10°C to 55°C (with no condensation or icing) Storage: -25°C to 65°C (with no condensation or icing)				
Ambient humidity	Operating: 25% to 85% (with no condensation)				
Approved safety standards	UL61010-1, CSA C22.2 No.61010-1-04, conforms to EN61010-1 (Pollution degree 2/overvoltage category II Conforms to VDE0106/P100 (finger protection)				
EMC	(EMI) Emission Enclosure: Emission AC Mains: (EMS) Immunity ESD: Immunity RF-interference: Electrical Fast Transient Noise: Immunity Burst Noise: Immunity Surge: Immunity Conducted Disturbance: Immunity Voltage Dip/Interrupting:	CISPR 11 Group 1 CISPR 11 Group 1 EN61326-1 Int EN61000-4-2: 4 I 8 EN61000-4-3: 10 EN61000-4-4: 2 I 1 kV line to line (I// EN61000-4-5: 1 I 2 I EN61000-4-6: 3	O signal line) kV (power line) kV line to ground (power line)		
Weight	Approx. 200 g				

# ■ Characteristics

Input signal	DC voltage/current (0 to 20 mA, 4 to 20 mA, 0 to 5 V, 1 to 5 V, ±5 V, ±10 V)		
A/D conversion	Double integral method		
Input impedance	Current input: Approx. 45 $\Omega$ , Voltage input: 1 M $\Omega$ min.		
Sampling period	250 ms		
Display refresh period	Sampling period (sampling times multiplied by number of measurements for averaging if average pro- cessing is selected.)		
Max. displayed digits	5 digits (-19999 to 99999)		
Display	7-segment digital display, Character height: 14.2 mm		
Polarity display	"-" is displayed automatically with a negative input signal.		
Zero display	Leading zeros are not displayed.		
Scaling function	Programmable with front-panel key inputs (range of display: -19999 to 99999). The decimal point p sition can be set as desired.		
Hold function	Max. hold (maximum value), Min. hold (minimum value)		
Hysteresis setting Programmable with front-panel key inputs (0001 to 9999).			
Other functions       Forced-zero (with front-panel key)         Zero-limit       Scaling teach function         Display color change (green (red), green, red (green), red)       OUT type change (upper limit, lower limit, upper/lower limit)         Average processing (simple average)       Average)			
Output	Relays: 2 SPST-NO		
Delay in comparative outputs	750 ms max.		
Degree of protection         Front panel: NEMA TYPE 4X for indoor use (equivalent to IP66)           Rear case:         IEC standard IP20           Terminals:         IEC standard IP00 + finger protection (VDE0106/100)			
Memory protection	Non-volatile memory (EEPROM) (possible to rewrite 100,000 times) (with terminal cover attached)		

# Measuring Ranges

## Process Voltage/Current Inputs

Input	Measuring range	Measuring accuracy	Input impedance	Displayable range
DC voltage	1.000 to 5.000 V	±0.1% FS ±1 digit max.	1 M $\Omega$ min.	-19999 to 99999
	0.000 to 5.000 V	(at 23±3°C)		(with scaling function)
		±0.1% FS ±1 digit max.		
	-10.00 to 10.00 V	(at 23±5°C)		
DC current	4.00 to 20.00 mA/ 0.00 to 20.00 mA	±0.1% FS ±1 digit max. (at 23±3°C)	45 Ω	


# ■ Input/Output Ratings

## Relay Contact Output


Item	Resistive load ( $\cos \phi = 1$ )	Inductive load ( $\cos\phi$ = 0.4, L/R=7 ms)
Rated load (UL ratings)	5 A at 250 VAC, 5 A at 30 VDC	1.5 A at 250 VAC, 1.5 A at 30 VDC
Min. permissible load (P level, reference value)	10 mA at 5 VDC	
Mechanical life	5,000,000 times min.	
Electrical life	100,000 times min.	


# Connections

# Terminal Arrangement

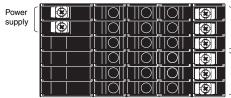


Output terminals

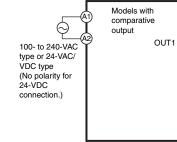

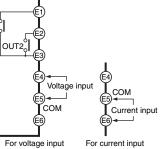


Terminal No.	Name	Description
A1 - A2	Operation power	Connects the operation power supply.
(E4), (E6)-(E5)	Analog input	Connects the voltage or current analog input.
(E1), (E2-(E3)	Outputs	Outputs the relay outputs.


## Block Diagram

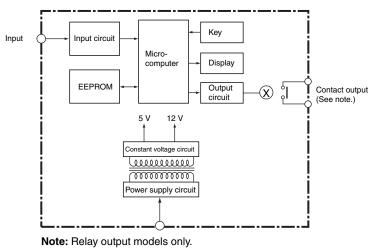

## ■ Input Circuits

### Analog Input (DC Voltage/Current)

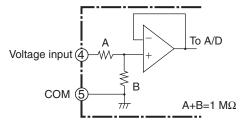

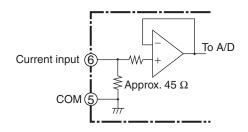

## ■ Main Functions

### **Input Types and Ranges**

Input type (setting parameter)	Function	Input r (setting pa		Setting range
Input range (-n-E)	Selects DC voltage/current signal	0 to 20 mA	(0-20)	Displayable from -19999 to 99999
	input	4 to 20 mA	(4-20)	with scaling function.
		0 to 5 V	(8-5)	The position of the decimal point can be set as desired.
		1 to 5 V	( :-5)	can be set as desired.
		±5 V	(5)	]
		±10 V	( 12)	

Note: The initial value for the input range is "4 to 20 mA (4-20)."

### Scaling


Analog (Process) Inputs

The K3MA-J converts input signals into desired physical values.

INPUT2: Any input value DISPLAY2: Displayed value corresponding to INPUT2 INPUT1: Any input value DISPLAY1: Displayed value corresponding to INPUT1

When DISPLAY1 is set for INPUT1, and DISPLAY2 is set for INPUT2, a line will be displayed joining the two points. (Raise shift, reverse scaling, plus/minus display, etc., can be adjusted as desired.)

Parameter	Setting value	Meaning		Parameter	Setting value	Meaning
īnP. l	- 19999 to 99999	Input value for d5P. 1		dP	0.0000	Display four digits after decimal point
d5P. I	- 19999 to 99999	Input value for EnP. 1			00.000	Display three digits after decimal point
inP.2	- 19999 to 99999	Input value for d5P.2			000.00	Display two digits after decimal point
d5P.2	- 19999 to 99999	Input value for Inp.2			0000.0	Display one digit after decimal point
			•		00000	No decimal point

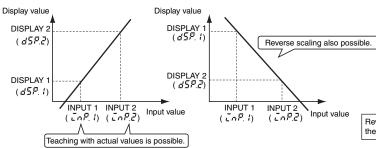

The decimal point can be optionally displayed. When displaying the decimal point, consider the number of digits to follow the decimal point prior to setting the scaling display value.


Reverse scaling, where the display value decreases as the input value increases, is also possible.

Instead of setting by inputting with the D Up Key and Shift Key, current values can be input as scaling input values for teaching. This is useful for making settings while checking the operation status of the K3MA-J.

### **Convenient Functions**

### Scaling Teach

The parameters  $(\bar{L}, \bar{L}, \bar{L},$ 

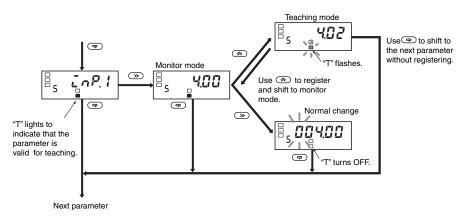

### **OUT Types (Comparative Output Models Only)**

OUT 1 and OUT 2 can be set to operate in one of the three following modes in accordance with the compared values:

- Upper limit (High Acting):
- The output is turned ON when the measurement value is greater than its set value.
- Lower limit (Low Acting):

The output is turned ON when the measurement value is less than its set value.

• Upper and lower limits (Outside Band Acting):

An upper limit (H set value) and lower limit (L set value) can be set independently.

The output is turned ON when the measurement value is greater than upper-limit set value or less than the lower-limit set value.

### **Upper Limit (High Acting)**


### Lower Limit (Low Acting)

### Upper and Lower Limits (Outside Band Acting)

OUT1/2 upper-limit value

OUT1/2 lower-limit value

Measurement value

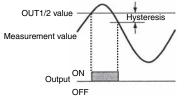

The three types of output operations shown above can be combined as desired. The following are examples of possible combinations.

ON

OFF

Hysteres

### Upper Limit 2-stage Output

### Threshold Output

Measurement value

OUT1/2 value

Output


### Combination of Upper Limit and Upper/Lower Limits

Output ON

OFF

Hysteresis

Hysteresis

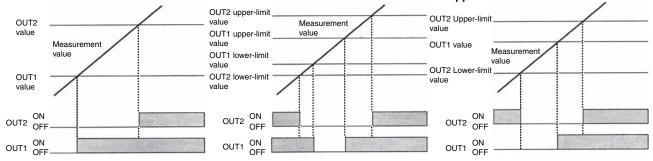

## Parameter Initialization


This function returns all of the parameters to their initial values.

Parameter	Setting value	Meaning
īnīt -	ōFF	
	ōn	Initializes all parame- ters.

Use this to reset the K3MA-J after returning it to its factory-set condition.

### Average Processing


Average processing stabilizes displayed values to minimize flicker by averaging the fluctuating input signals. Average processing can be performed for the measurement values in either of four steps (OFF, 2 times, 4 times, or 8 times).

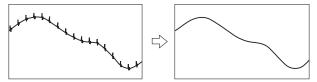

This is useful for ignoring rapid fluctuations, e.g., eliminating spike noise.

### Hysteresis (Comparative Output Models Only)


The hysteresis of comparative outputs can be set to prevent chattering in the output when the measurement value fluctuates finely near the OUT value.

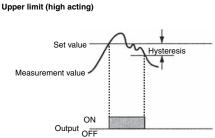

## Zero-limit Function


The zero-limit function changes any value below the set value to zero. This is useful when you want to change negative values to zero rather than display them, or when you want to make the display in the smallest part of the input range zero.

Parameter	Setting value	Meaning
E-LEA	ōFF	OFF: No zero-limit
	ān	ON: Zero-limit
Līn-P	0 to 99	0 to 99: Zero-limit value

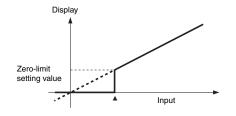

### **Changing the Display Color**

The color of the value displayed can be set to either red or green. For comparative output models (K3MA-J-A2), the display color can be set to change from green to red, or from red to green, according to the status of the comparison criterion.

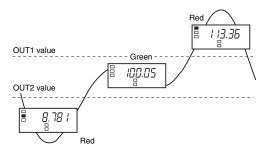

## **Display Auto-return Time**

This function automatically returns the display to the operation level's current value if no keys are pressed for a preset time (called the display auto-return time).

## Move-to-Protect-Level Time

The time required to shift to the protect level can be set as desired.

## Forced-zero Function


It is possible to shift from a value to the zero point with one touch of the Up Key on the front panel (for example, when adjusting reference values).




Note: Used only for releasing the forced-zero with the Protect menu.

## MAX/MIN Display

The maximum and minimum measurement (display) values from the time the power is turned ON until the current time can be stored and displayed. This is useful, for example, when measuring the maximum value.

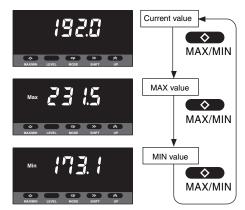

# Nomenclature

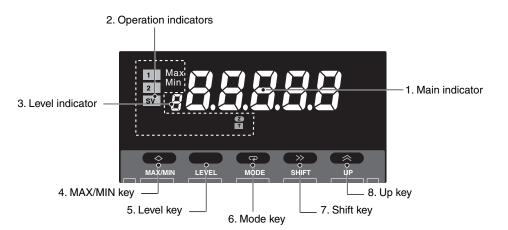

Name		Functions		
1. Main indicator		Displays current values, parameters, and set values.		
2. Opera-	1	Lit when output 1 is ON.		
tion indica-	2	Lit when output 2 is ON.		
tors	SV	Lit when a set value is being displayed or changed.		
	Max	Lit when the main indicator is showing the MAX value.		
	Min	Lit when the main indicator is showing the MIN value.		
	Z	Lit during the forced-zero operation.		
	Т	Lit when the teaching function is operable. Blinks while the teaching function is operating.		
3. Level indicator		Displays the current level that the K3MA-J is in. (See below for details.)		
4. MAX/MIN Key		Used to display the MAX and MIN values when a measurement value is being displayed.		
5. Level Key		Used to change the level.		
6. Mode Key		Used to allow the main indicator to indicate parameters sequentially.		
7. Shift Key		Used to enable a set value to be changed. When changing a set value, this key is used to move along the digits.		
8. Up Key Used to change a set value. Used to set or clear a forced-		Used to change a set value. Used to set or clear a forced-zero function when a measurement value is being displayed.		

Level indicator	Level	
Ρ	Protect	
Not lit	Operation	
5	Initial setting	
F	Advanced-function setting	


# **Dimensions**

(Unit:mm)

-120 min.


45\*0



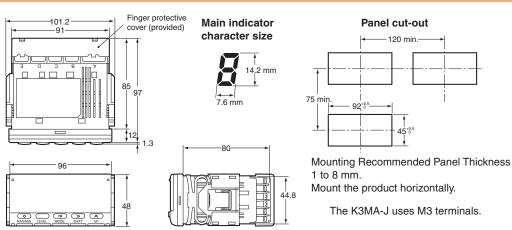

# **Application Examples**

# Monitoring interior tank pressure

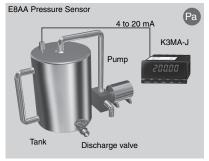


• Monitoring gas pressure


 Inspection instruments in food or pharmaceutical plants

# Installation

- **1.** Insert the K3MA-J into the panel cut-out hole.
- 2. For a waterproof installation, insert the rubber gasket onto the body of the K3MA-J.

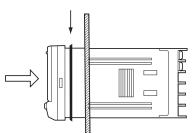


**3.** Fit the adaptor into the grooves on the left and right sides of the rear case, then push it until it contacts the panel to secure the K3MA-J.

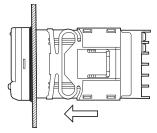


# ■ Angle of View


The K3MA is designed to provide the best visibility at the angles shown in the following diagram.

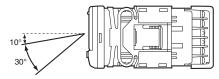

# ■ Watertight Cover

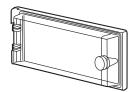


### Displaying/outputting liquid level

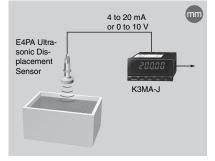

- Monitoring liquid level in cleaning tanks
  Water tanks, devices using chemicals,
- Water tanks, devices using chemicals, etc.


### Flowrate sensor

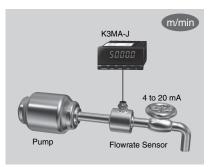

- Monitoring send-out flowrate
- Water processing devices, etc.

# Rubber Packing

### K32-P1

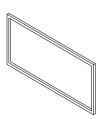

If the rubber packing is lost or damaged, it can be ordered using the following model number: K32-P1.

(Depending on the operating environment, deterioration, contraction, or hardening of the rubber packing may occur and so, in order to ensure the level of waterproofing specified in NEMA TYPE 4, periodic replacement is recommended.)


Note: Rubber packing is provided with the Controller.

# Wiring Precautions

- Use crimp terminals.
- Tighten the terminal screws to a torque of approximately 0.5 N·m.
- To avoid the influence of noise, route signal lines and power lines separately.

# ■ Wiring

• Use the following M3 crimp terminals.

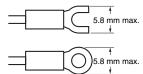

# ■ Unit Labels (Provided)

• The unit labels are not attached to the K3MA-J. Select the desired labels from the provided sheet.


<u>v</u>	A	X	A	%	J	Pa	Ω
s	/	Ν	m	W	°C	m³	k
۴	g	m	iin	m	m	rp	m
VA m		V	m	ıΑ	ŀ	lz	
m/min <b>omron</b>							
ου	то	UT					

Note: For scales and gauges, use the unit labels that are specified by the relevant laws or regulations.

## Operations in Run Mode Setting and Releasing a Forced Zero

### Setting a Forced Zero

Any reference point can be easily set to zero.

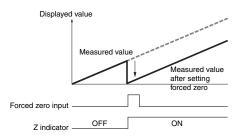

• Press the Up Key while the measurement is being displayed. The displayed value will be shifted to 0 and measurement will be continued.

If forced-zero protection is turned ON in the protect level, the Up Key cannot be used to set a forced zero. Forced-zero protection is ON in the default settings.

- The Z indicator will light when a forced zero has been set.
- The shifted measurement value after a forced zero has been set will be maintained even after power is turned OFF.

### **Releasing a Forced Zero**

• Press the Up Key for 1 s min. to release the forced zero. The Z indicator will turn OFF.

## Levels

## **Checking the Maximum and Minimum Values**


The maximum and minimum values can be displayed by pressing the MAX/MIN Key while the measurement is being displayed.



The maximum and minimum values can be reset by pressing the MIN/MAX Key for 1 s min. when the maximum or minimum value is displayed.

### <u>Checking and Setting Comparative Set Values (for</u> Models with the Comparative Output Function)


Each time the Mode Key is pressed when the measurement value, maximum value, or minimum value is displayed, the comparative values will be displayed in the following order: OUT1 value (or OUT1 upper-limit value, OUT1 lower-limit 1), OUT 2 value (or OUT 2 upper-limit value, OUT1 lower-limit value, OUT2 lower-limit value 2).

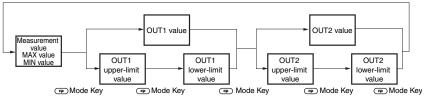

**Note:** When a comparative value is displayed, it can be changed by pressing the Shift Key and the Up Key (when key protection is OFF).

"Level" refers to a grouping of parameters. The following table lists the operations that are possible in each of the levels, and the diagram tells how to move between levels. There are some parameters that are not displayed for certain models.

Level name	Function	Measurement	
Protect	Setting lockouts.	Continue	
Operation	Displaying current values, setting/clearing forced-zero function, and setting OUT 1/2 values.	Continue	
Initial setting	Making initial settings of input type, scaling, output operating action, and other parameters.	Stopped	
Advanced-function setting	Setting average processing, display color settings, and other ad- vanced-function parameters.	Stopped	

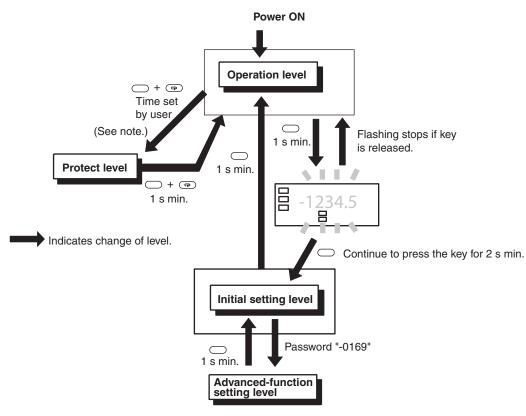

Note: The move-to-protect-level time can be set in the advanced-function setting level.

## Parameters

ome parameters are not displayed for certain models.


he K3MA-J will stop measurement if the level is changed to the initial setting level or


dvanced-function setting level.

the input range is changed, some parameters are set to default values. Therefore,


et the input range first.

ettings displayed in reversed colors are defaults.

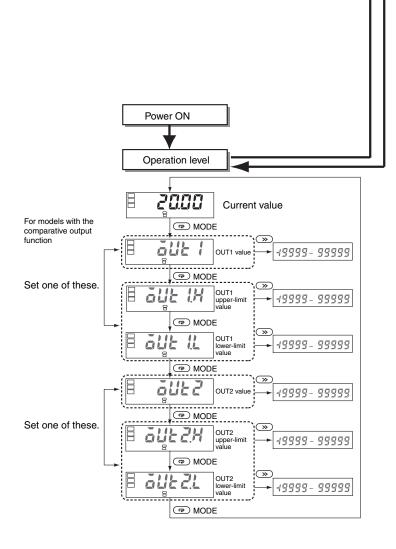

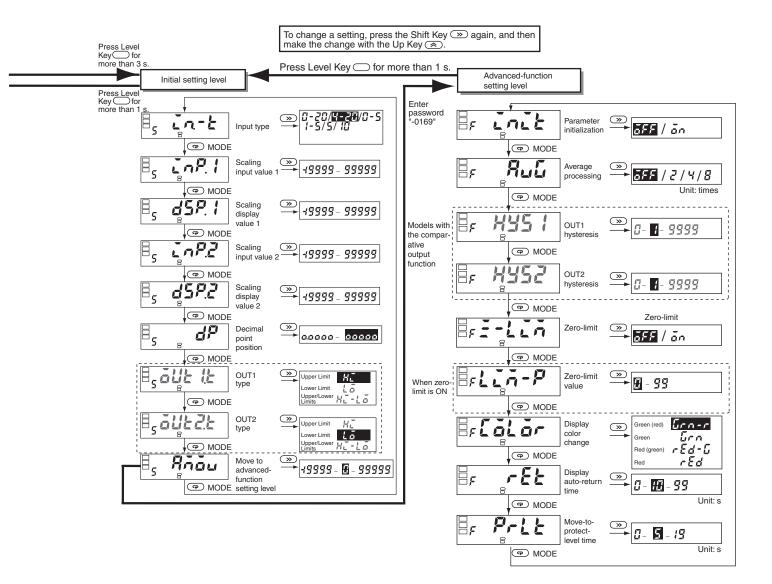

## K3MA-J

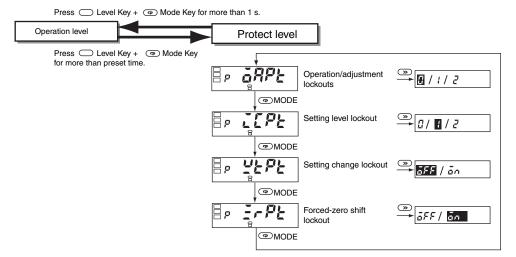

### **Operation/Adjustment Lockouts**

Restricts key operations for operation level and adjustment level.

Parameter	Setting	Operation level		
		Current value display	Set value display	
ōRP£	0	Allowed	Allowed	
	1	Allowed	Allowed	
	2	Allowed	Prohibited	

• Initial setting is 0.

 This cannot be displayed on models not equipped with the comparative output function.

## Setting Level Lockout

Restricts shifting to initial setting level or advanced-function setting level.

Parameter	Setting	Shift to initial setting level	Shift to advanced- function setting level
CEPE	0	Allowed	Allowed
	1	Allowed	Prohibited
	2	Prohibited	Prohibited

## Setting Change Lockout

Restricts setting changes by key operation. When this lockout is set, it is no longer possible to shift to a setting change mode.

Parameter	Setting	Setting change by key operation
<u>YEPE</u>	ōFF	Allowed
	ōn	Prohibited


However, all protect level parameters can still be changed.

### Forced-zero Lockout

Restricts the setting or release of a forced-zero by front-panel key operation.

Parameter	Setting	Setting/release of forced-zero by key operation
ErPE	ōFF	Allowed
	ōn	Prohibited

# Initial Settings

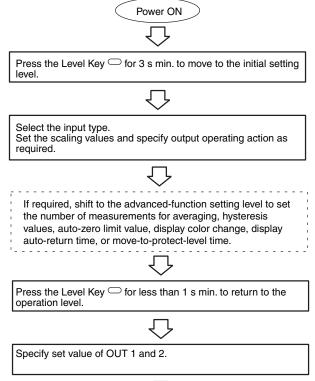




# Setting Example

### **Initial Settings**

The settings for the following example are shown here.


### Example: Tank pressure display

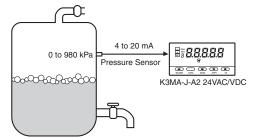

Here, the pressure inside the tank is to be displayed in units of 0.1 kPa.

• Pressure Sensor

Measuring range: 0 to 980 kPa, output 4 to 20 mA

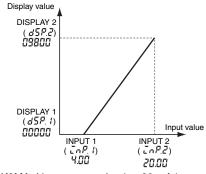

- 1. Set the K3MA-J input type to the 4 to 20 mA input range. Parameter: 20-2 (input type), Setting value: 4-20
- 2. Set the display values for the corresponding input values. Set the scaling as shown below for the following correspondence: input 4 mA-->display 0.0, input 20 mA-->display 980.0 Parameter Setting value

	Setting value
<pre>input value 1)</pre>	4.00
d5P. I (scaling display value 1	) 00000
<i>i</i> ∩ <i>P</i> .2 (scaling input value 2)	20.00
d5P.2 (scaling display value 2	2) 09800
dP (decimal point position)	0000.0

Note: The decimal point position here refers to the position in the number after scaling. When setting the scaling display value, it is necessary to consider the number of digits to be displayed past the decimal point.

# ■ Troubleshooting

When an error occurs, error details will be displayed on the main indicator. Confirm the error from the main indicator and take the appropriate countermeasures.

Level display	Main indicator	Error contents	Countermeasures
Not lit	EIII	RAM memory error	Repair is necessary.
			Consult your OMRON sales representative.
5	Ε Ι Ι Ι	EEPROM memory error	When this error is displayed, press the Level Key for 3 sec- onds, and the settings will be restored to the factory set- tings. If the error cannot be recovered, repair is necessary. Con- sult your OMRON sales representative.
Not lit	Flashes 5.Err	You will see this indication when turning ON the product the first time after purchase. This is be- cause the input signal value is 0 mA at that time even though the range is factory set to 4 to 20 mA. For the K3MA-J-A2, the relay output will be OFF.	At the initial setting level, set the input type and other pa- rameters according to your application.
		Input error	Promptly change the input voltage/current to a value that falls within the measurement range.
			If the error cannot be recovered, repair is necessary. Con- sult your OMRON sales representative.
Not lit	Flashes 39399	The scaling display value exceeds 99999.	Promptly change the input to a value that falls within the specified range.
			The scaling value may be inappropriate. Review the scaling value at the initial setting level.
Not lit	Flashes -19999	The scaling display value is lower than -19999.	Promptly change the input to a value that falls within the specified range.
			The scaling value may be inappropriate. Review the scaling value at the initial setting level.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527

In the interest of product improvement, specifications are subject to change without notice.

### Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warrantv.

See http://www.omron.com/global/ or contact your Omron representative for published information.

### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

In the interest of product improvement, specifications are subject to change without notice.

**OMRON** Corporation Industrial Automation Company

http://www.ia.omron.com/